USER'S MANUAL
version 1.1

English

AC-3500 MAINS SOCKET SWITCH 'HEAVY DUTY'

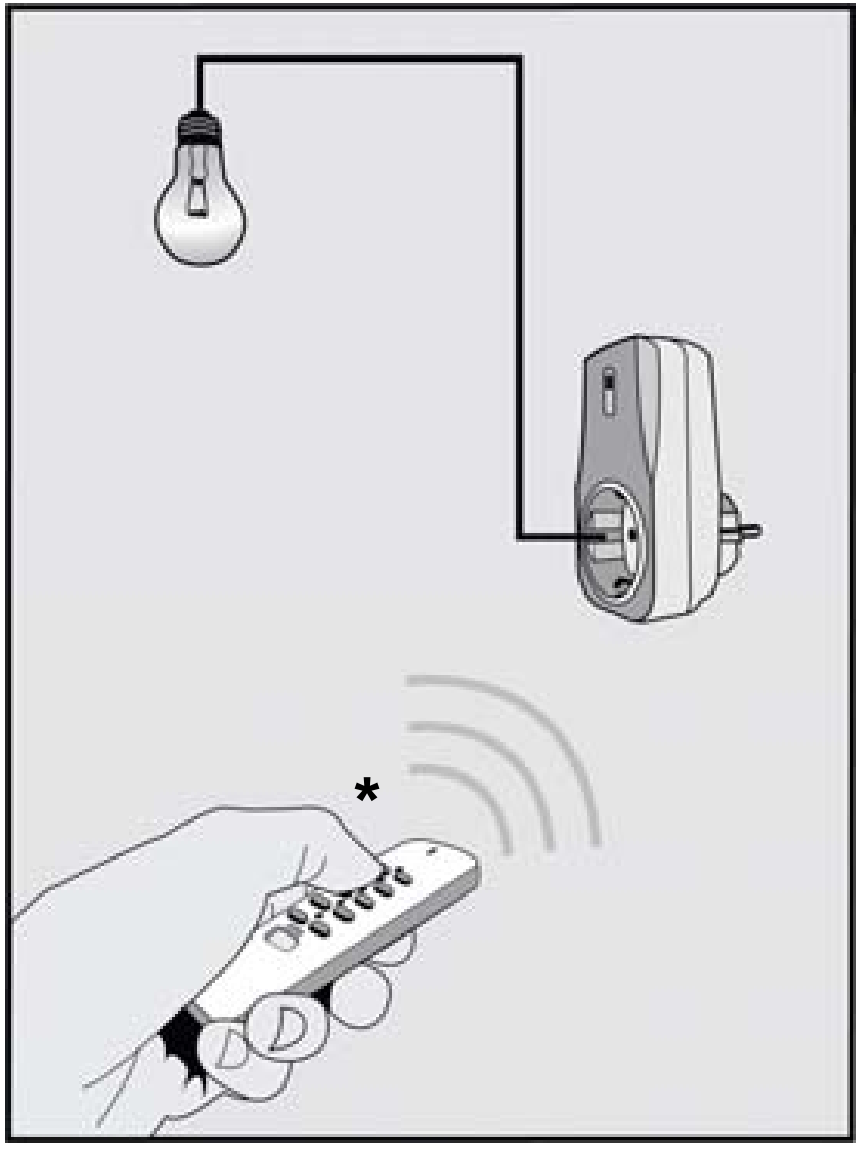

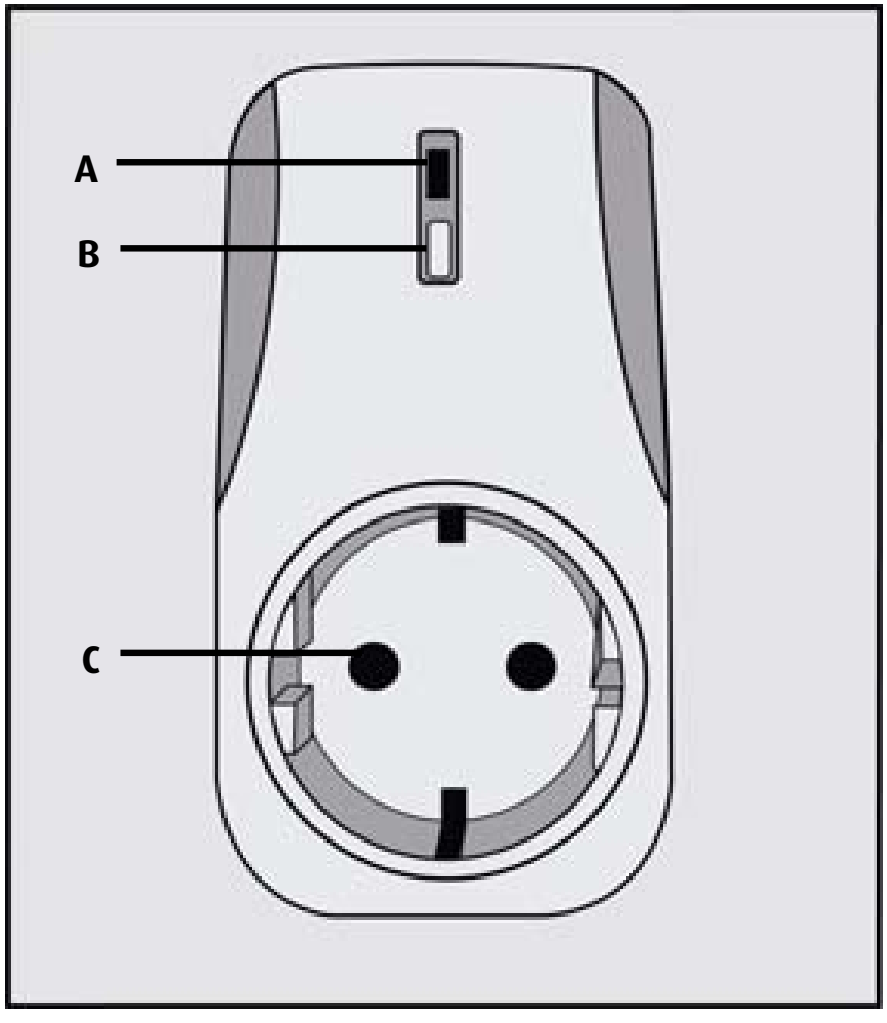

***** *Picture of the AYCT-102*
(not always included; check the specifications on the packaging)

A: Indicator (voltage and connection status)
B: Search mode button
C: Child protection

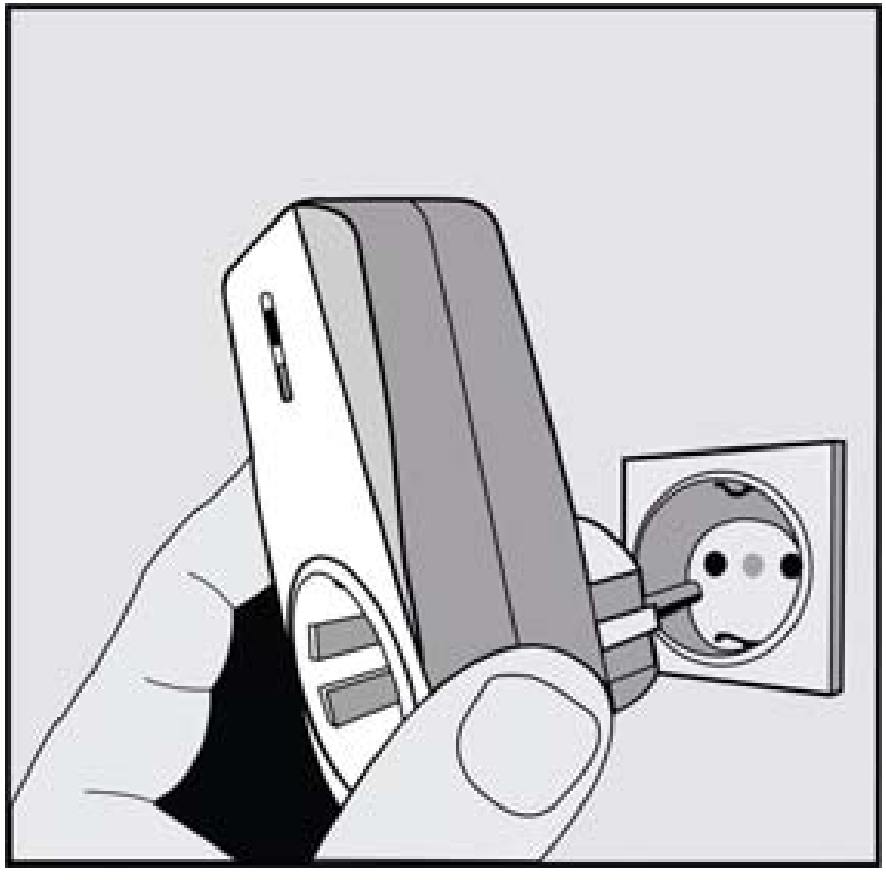

[1] Insert the plug portion into a mains socket. The indicator remains lit as long as there is power at the mains socket.

⚠ *The switched socket is normally off. The switched socket can only be switched on once it has been linked to a transmitter!*

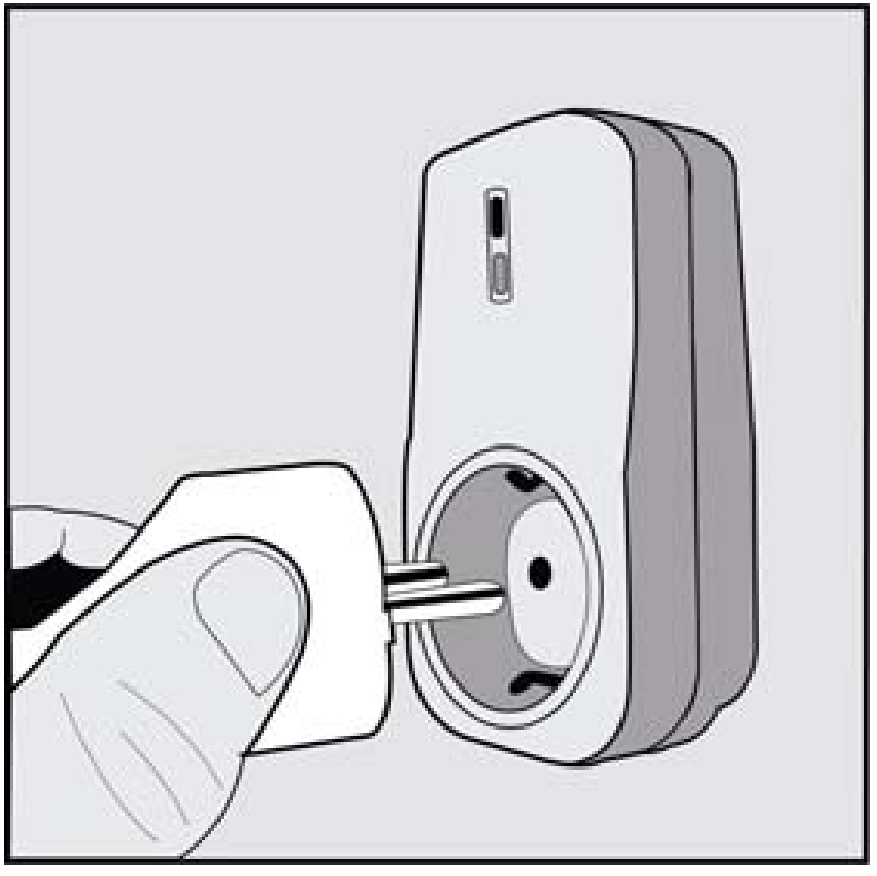

[2] Connect the lamp (or other suitable type of equipment) to the switched socket.

⚠ *This product is suitable for devices with a power consumption of maximum 3500 Watts!*

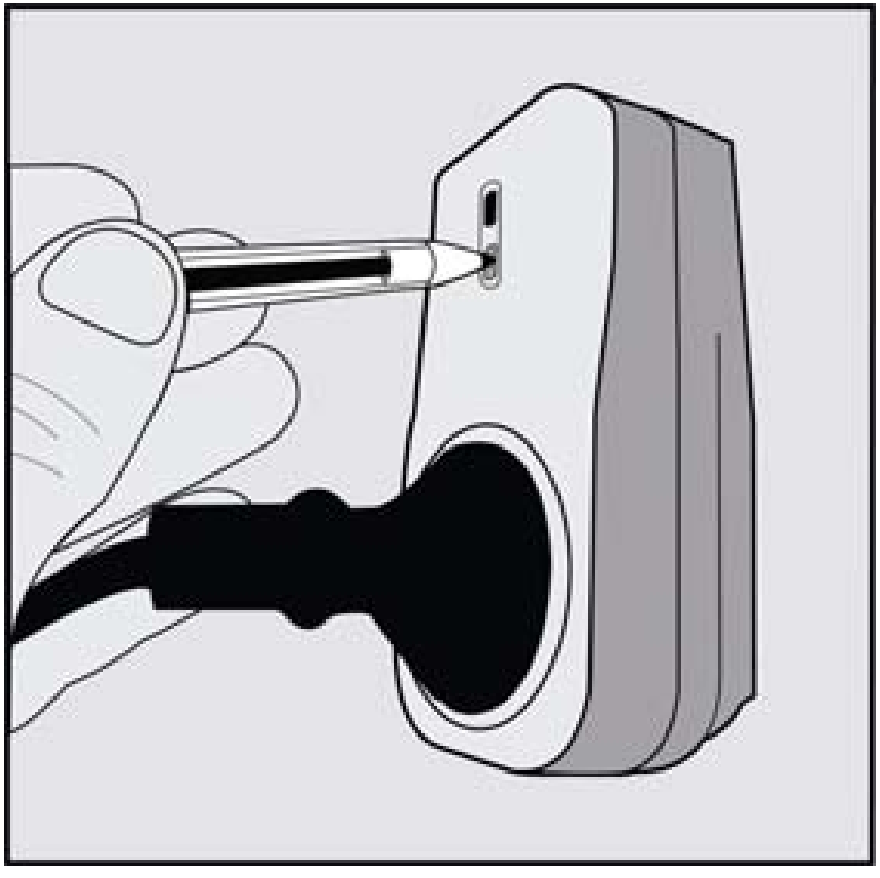

[3] Briefly press the search mode button (use a pen for example). The indicator will begin to flash.

⚠ *The search mode will be active for 15 seconds.* If necessary, repeat ***[3]*** *to activate the search mode again!*

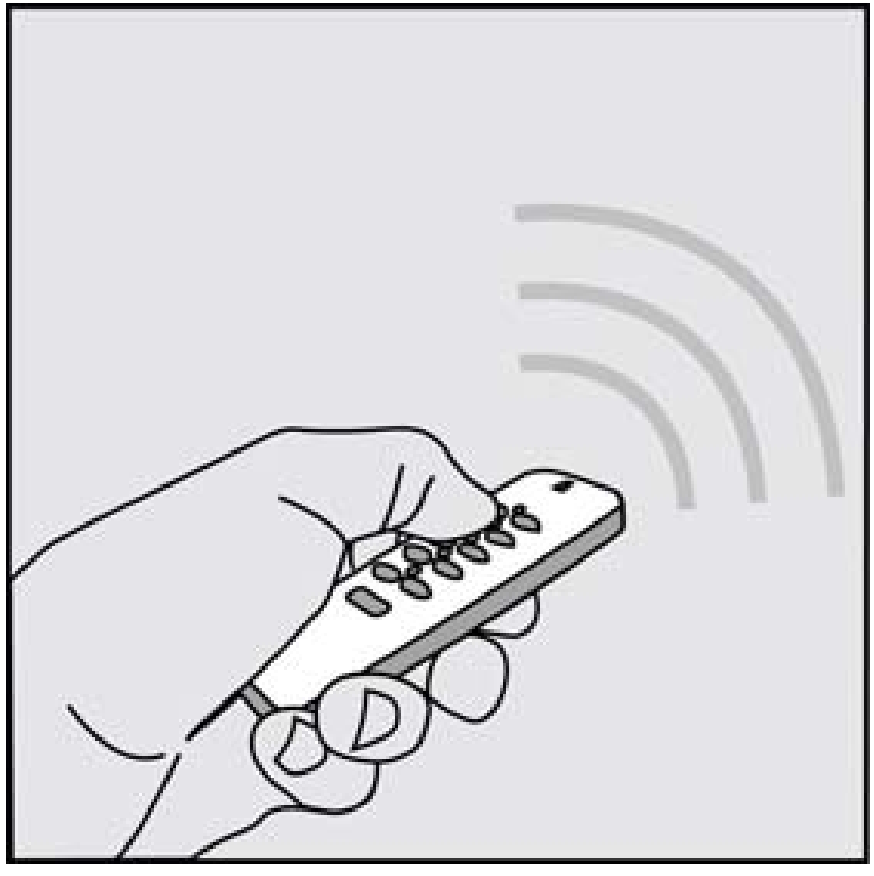

[4] Send an "on" signal with the transmitter; for example: press the desired on/off button of a remote control or wall switch or activate the motion detector. The indicator on the mains socket switch stops flashing as soon as the connection has been made.

⚠ *See the manual for the concerned transmitter.* The pictured transmitter is not always included. *Check the specifications on the packaging!*

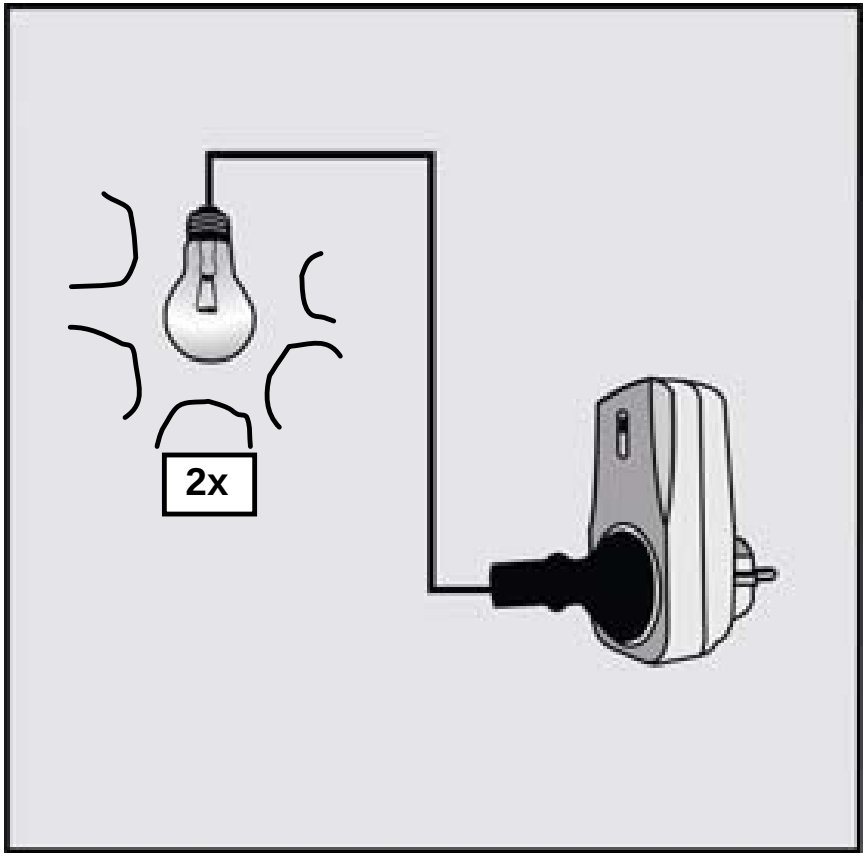

[5] To confirm, the switched socket switches on and off two times. The code of the transmitter is stored in the memory of the mains socket switch and the product is ready for use.

⚠ *A maximum of 6 different transmitter codes can be stored simultaneously*.

Remarks

⚠ Reminders

- This product must be used in combination with at least one COCO transmitter.
- This product is a switch/receiver: control lights (or other suitable devices) remotely, without complicated wiring.
- This product is equipped with child protection. This may make it slightly more difficult to insert plugs. If so, push the plug firmly and directly into the switched socket.
- To prevent interference, avoid placing multiple products close to each other. The minimum distance between units should be approx. 50 cm.
- The wireless system can be expanded indefinitely with other COCO remote controls and/or receivers.
- Your COCO transmitter may have a special "group" button with which multiple receivers can be switched on/off simultaneously. Repeat **[3 - 4]** and press the "group" button on the transmitter during step **[4]**.
- The codes remain in the memory even during a power failure or when the mains socket switch is removed from the mains socket.
- To delete the stored codes (resetting the memory): (1) Hold in the search mode button. (2) The indicator begins flashing after approx. 7 seconds. (3) Release the search mode button. (4) Briefly press the search mode button again. (5) To confirm, the switched socket switches on and off two times.
- If the product does not work:
  - Reset the memory (see previous line) and set the code from the transmitter again (repeat **[3 - 4]**).
  - Check whether the indicator is lit. If not, there may not be any power at the mains socket.
  - Make sure the connected device is switched on.

⚠ Safety instructions

- Wa rning: Even if the product is switched off, voltage may still be present at the switched socket!
- Never use COCO products for life support systems or other applications in which equipment malfunctions can have life-threatening consequences.
- Do not connect any lights or other devices that consume more than 3500 Watts. Connecting incorrect equipment can cause defects, a short circuit and fire.

- Do not expose this product to excessive heat, direct sunlight or moisture.
- Do not attempt to repair this product. If the product is damaged or if you are in doubt about the proper operation, take the product back to the place of purchase.
- Do not use the product in damp areas. Clean the device with a clean cloth.

⚠ Wireless

- This product works using a radio signal that passes through walls, windows and doors. The range is maximum 75 metres in the open air. The range indoors is strongly influenced by local conditions such as concrete, glass and metals. On average, the indoor range is approximately 30 metres.
- New double glass often includes a thin metallic layer. This type of glazing ("**HR glass**") allows most visible light to pass through but has a negative impact on radio signals. If there is HR glass between the transmitter and receiver, you should expect a significant reduction of the range of the wireless signal.
- This product operates at a frequency of 433.92 MHz. It complies with the essential requirements and other conditions of R&TTE Directive 1999/5/EC and can be used in all EU countries.
- There may be restrictions on the use of this device outside the EU. If this device is used outside the EU, check whether the device complies with the local directives.

CE

This product complies with the essential requirements and other relevant provisions of the applicable European directives. The Declaration of Conformity (DoC) is available at www.coco-technology.com.

If possible, submit this product for recycling after use. Do not dispose of the product with household trash.

Warranty and copyright

This device is covered by a 2-year warranty that begins on the day of purchase. Visit www.coco-technology.com/warranty for additional information. Reprinting of (portions of) this manual without permission from Pan-Trade International B.V. is expressly prohibited.

PAN-TRADE INTERNATIONAL B.V.

P.O. BOX 126
4760 AC ZEVENBERGEN
THE NETHERLANDS
www.coco-technology.com

CE

Declaration of Conformity

Pan-Trade International BV declares that the COCO product, model:

type designation	AC-3500 MAINS SOCKET SWITCH ‘HEAVY DUTY’
item number	74008

is in compliance with the essential requirements and other relevant provisions of directives R&TTE 1999/5/EC, EMC 2004/108/EC and LVD 2006/95/EC and is compatible with the standards EN 300 220-1/3, EN 55015, EN 301 489-1/3 and EN 60950.

Manufacturer / Authorised representative,

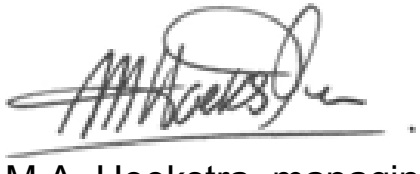

M.A. Hoekstra, managing director
Zevenbergen, 2008-01-30